

Digibee Digital Tour Guide System


Operator's Manual






OVERVIEW

Transmitter

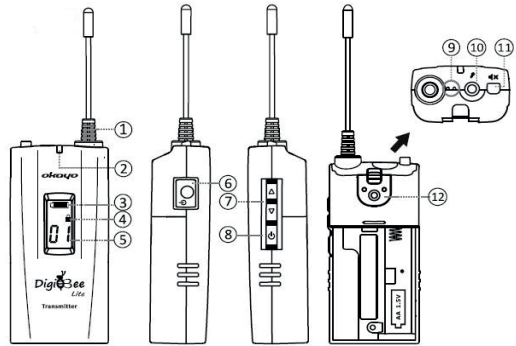



1. Antenna
2. Power/Signal indikator
3. LCD battery status
4. LCD channel lock
5. LCD selected channel
6. Aux-in socket
7. Up/Down button
8. Power button
9. Built-in microphone
10. Mic-in socket
11. Mute/Sync button
12. Lanyard tie-up



Power on/off

- Press and hold power button  for 1 second to turn the transmitter on. LCD screen shows  and then last used channel.
- Press and hold power button  for 2 seconds to turn the transmitter off. LCD screen shows "OF" and then shuts down.

Channel lock/unlock

- Channel will automatically be locked and symbol "  " shows up if the device is idle for 5 seconds after being turned on.
- To unlock the channel, press buttons  and  simultaneously for 2 seconds until symbol "  " disappears.

Channel selection

- Press button  or  to select preferred channel when channels are unlocked.

Sensitivity adjustment (transmitter only)


- When channel is locked, press and hold Δ for 2 seconds to enter mode **U**.
- Press either button Δ/∇ to adjust the sensitivity (Default: **U5, U1 ~ U8**).
- Press power button ⏻ to confirm the setting.

Mute/Sync

- When the mute button is pressed no sound reaches the microphone. Note that the mute button also is used for synchronization (see below).

Receiver

1. Antenna
2. Power/Signal indicator
3. LCD battery status
4. LCD channel lock
5. LCD selected channel
6. Volume
7. Up/Down button
8. Power button
9. Earphone socket

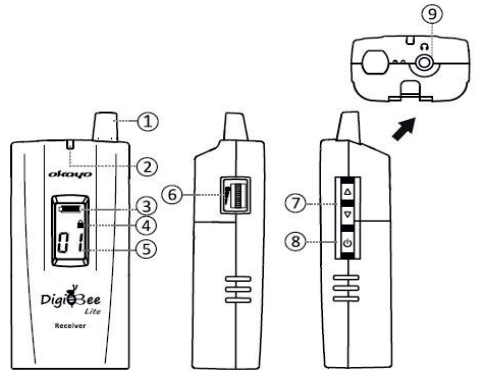

Power on/off

- Press and hold power button ⏻ for 1 second to turn the receiver on. LCD screen shows **On** and then last used channel.
- Press and hold power button ⏻ for 2 seconds to turn the receiver off. LCD screen shows **Off** and then shuts down and the LCD turns black.

Power saving (receiver only)

Power of receivers will be off if no signal is received for 20 minutes.

Transmitter and receiver channel synchronization

When synchronizing the units should not be more than one meter apart.

- Press mute/sync button on transmitter before it is turned on.
- Turn the transmitter on and purple LED flashes to indicate the activation of channel-sync mode.
- Turn receiver(s) on to be channel synchronized (one or multiple receivers can be turned on at the same time).
- When channel is successfully synchronized, receiver's LCD shows same channel as that of the transmitter and its LED turns steady blue.
- Press the transmitter's mute/sync button to exit sync setup. When the transmitter has left sync set up, the sound is turned off when the mute/sync button is pressed.

Note! If synchronization fails

1. Turn the transmitter off and repeat above procedure to redo the synchronization.
2. If it still doesn't work, turn off the transmitter and receiver(s) and redo the synchronization procedure again as described above.

Power / Signal indicator

Indicator behavior		Transmitter	Receiver
Flash	<i>Red</i>	Mute activated Low battery	-
	<i>Blue</i>	Mute activated Sufficient battery	-
	<i>Purple</i>	Sync activated	-
Steady	<i>Red</i>	Signal transmitted Low battery	Signal received Low battery
	<i>Blue</i>	Signal transmitted Sufficient battery	Signal mottagen Sufficient battery
No LED		Device is not turned on	Device is not turned on/ Signal is not received

This Operator's manual is based on the information available at the time of printing and is subject to change without notice.

Bo Edin AB / Univox	+46 (0)8 767 18 18	info@edin.se	www.univox.eu
---------------------	--------------------	--------------	---------------